

START >>

- > BEFORE USING YOUR NEW STRIDA, PLEASE READ THE SAFETY INSTRUCTIONS IN THIS QUICKSTART GUIDE AND ALSO IN THE ENCLOSED USER MANUAL
- > CHECK THE LED BIKE LIGHTS
- > BEFORE STARTING OFF, ALWAYS CHECK THE CORRECT
 - > FUNCTIONING OF THE BRAKES
 - > SECURING OF THE BOTTOM FRAME TUBE (SECURE IT IN THE SAFETY CATCH OF THE CHROME PIN)
 - > UNFOLDING OF HANDLEBARS (BY CLICKING THE SAFETY CATCHES IN PLACE)
 - > CLOSING OF THE QUICK RELEASE UNDER THE STEERING TUBE

SAFETY FIRST! >>

- > WHEN BRAKING, FIRST USE THE REAR BRAKE SOLELY AND GRADUALLY ADD BRAKING FORCE BY USING THE FRONT BRAKE
- > THE STRIDA IS A FOLDING BIKE, MADE FOR NORMAL PRACTISE. ANY OTHER SORT OF PRACTISE, LIKE MAKING WHEELIES, STUNTS, ETC. CAN CAUSE SERIOUS DAMAGE TO BOTH BIKER AND STRIDA FOLDING BIKE.

WWW.STRIDA.CO.UK

GETTING READY >>

- > REMOVE THE STRIDA FROM THE BOX
- > REMOVE THE BLOCKS OF FOAM AND THE TIE WRAP(S)
- > REMOVE THE STRINGS THAT KEEP THE BRAKING HANDLES IN PLACE
- > CHECK TIRE INFLATION PRESSURE (4.5 BAR)

THE STRIDA IS READY TO BE UNFOLDED, BUT PLEASE FOLLOW THESE INSTRUCTIONS:

RIDER LIMITATIONS

- > MAX. WEIGHT: 220 LBS. (100 KG.)
- > MAX. LENGTH : 64" (1.93 M.)
- > MIN. LENGTH: 44" (1.45 M.)



WWW.STRIDA.CO.UK

UNFOLDING >>



1

UNFOLD THE HANDLEBARS BY OPENING THE QUICK RELEASE UNDER THE STEERING TUBE. PUSH THE HANDLEBARS HORIZONTALLY TO THE SIDE. PRESS THE TWO SAFETY CATCHES ON THE HANDLEBARS. SLIDE THE BAR ENDS INTO PLACE. CLOSE THE QUICK RELEASE.

00:00





2

STAND AT THE LEFT SIDE BEHIND YOUR STRIDA BIKE. TILT IT SLIGHTLY TO THE RIGHT. FETCH THE BIKE WITH YOUR RIGHT HAND ON THE TUBE ABOVE THE SADDLE. TURN THE LEFT PADDLE TO THE FRONT. FLICK THE LEFT HANDLEBAR WITH YOUR LEFT HAND. NOW FRONT AND REAR WHEEL WILL SEPARATE.

04:00

ATTENTION! >>




IF YOUR STRIDA BIKE IS FOLDED OR UNFOLDED INCORRECTLY, IF IT FALLS DOWN, OR IF IT EXPERIENCES OTHER EXTREME FORCES, THE BALL WILL POP-OUT OF THE SYNTHETIC BALL JOINT AT THE UPPER END OF THE FRONT STEM IN ORDER TO PROTECT THE METAL FRAME. THEREFORE NEVER MAKE YOUR STRIDA BIKE FALL INTO A SPLIT. IN SUCH OCCASION PLEASE CONSULT ONE OF OUR OFFICIAL STRIDA DEALERS.



3

IN THE SAME MOTION "CATCH" THE STEERING TUBE WITH YOUR LEFT HAND. MEANWHILE MOVE YOUR RIGHT HAND TO THE BOTTOM PEDAL TUBE.

05:30

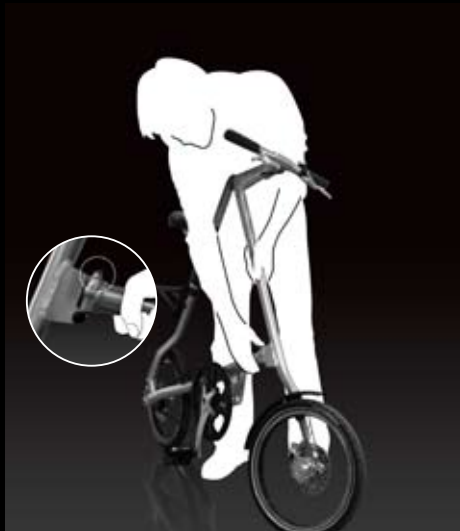

4

WITH YOUR LEFT HAND MOVE THE STEERING TUBE AROUND THE PROTRUDING PEDAL. CLICK THE BOTTOM PEDAL TUBE IN THE CHROME HINGE ON THE STEERING TUBE.

N.B. PLEASE ASSURE YOURSELF THAT THE BOTTOM TUBE HAS CLICKED INTO SECURED POSITION ON THE CHROME HINGE OF THE STEERING TUBE.

08:00



5

FINALLY, UNFOLD THE PEDALS.

10:00



IN USE >>

PLEASE CHECK THE FOLLOWING ITEMS REGULARLY:

> **TIRE INFLATION PRESSURE**

A TIRE INFLATION PRESSURE OF 4.5 BAR IS OPTIMAL, TOO LOW PRESSURE CAN CAUSE THE OUTER TYRES TO TEAR

> **THE TENSION OF THE BELT DRIVE**

TOO LITTLE TENSION MAY CAUSE THE BELT DRIVE TO SLIP AND THIS MIGHT DAMAGE THE REAR COG-WHEEL

> **BRAKE ADJUSTMENT**

BRAKE LININGS WILL WEAR AWAY THROUGH NORMAL USE AND THEREFORE THE BRAKES SHOULD BE ADJUSTED ON A REGULAR BASIS

IN CASE OF DOUBT, PLEASE CONSULT ONE OF OUR OFFICIAL STRIDA DEALERS, SEE LIST ON OUR WEBSITE.

WWW.STRIDA.CO.UK

FOLDING >>



1

STAND AT THE LEFT SIDE BEHIND YOUR STRIDA BIKE. PUT YOUR LEFT HAND ON THE STEERING TUBE AND TILT YOUR BODY SLIGHTLY OVER THE BIKE. HOLD THE BOTTOM PEDAL TUBE WITH YOUR RIGHT HAND. PUSH THE SAFETY CATCH ON THE CHROME HINGE WITH THE THUMB OF YOUR RIGHT HAND. AT THE SAME TIME LIFT THE BOTTOM PEDAL TUBE.



00:00



2

MOVE THE STEERING TUBE AROUND THE LEFT PEDAL, WHILE YOU LIFT THE STRIDA SLIGHTLY BACKWARDS. CLICK THE MAGNET OF THE FRONT WHEEL TO THE REAR WHEEL SHAFT. USE YOUR RIGHT HAND TO MOVE THE BOTTOM PEDAL TUBE BACKWARDS.



- 3** THEN, MOVE THE BOTTOM PEDAL TUBE TO THE BACK OF THE STEERING TUBE. THE TUBE WILL CLICK MAGNETICALLY RIGHT BEHIND THE TEFLON (STRIDA 5) STICKER.



4

TAKE THE SADDLE OF THE FOLDED STRIDA BETWEEN YOUR LEGS. OPEN THE QUICK RELEASE UNDER THE STEERING TUBE. PUSH ON THE TWO SAFETY CATCHES ON THE STEERING TUBE AND PULL THE TWO HALVES HANDLEBARS AWAY FROM THE MIDDLE. FOLD THE TWO HALVES OF THE STEERING TUBE PARALLEL TO THE STEERING TUBE. NOW CLOSE THE QUICK RELEASE UNDER THE STEERING TUBE.

07:00



5

FINALLY, PRESS ON THE PEDALS AND TURN THEM OVER IN FOLDED POSITION.

10:00



ACCESSORIES & PARTS >>

IF CASE YOU NEED ANY ACCESSORIES OR PARTS, PLEASE VISIT OUR WEBSITE WWW.STRIDA.CO.UK AND ORDER UNIQUE GADGETS AND PARTS ONLINE.

SERVICE >>

STRIDA OWNERS ENJOY EXCELLENT SERVICE AND SUPPORT FACILITIES. IF YOU HAVE QUESTIONS, PLEASE CONSULT ONE OF THE EMPLOYEES AT OUR MAIN OFFICE OR VISIT ONE OF OUR OFFICIAL STRIDA DEALERS.

DEALERS >>

FOR REPAIRS, MAINTENANCE, PURCHASE OF ACCESSORIES AND/OR PARTS, YOU ARE ALWAYS WELCOME AT ONE OF OUR OFFICIAL STRIDA DEALERS. THEY ALSO PROVIDE EXPERT CONSULTANCY. SEE THE SHOPLOCATOR ON OUR WEBSITE FOR ALL OFFICIAL STRIDA DEALERS IN YOUR AREA.

WARRANTY >>

EACH STRIDA BIKE IS SHIPPED WITH A ONE-YEAR WARRANTY ON ALL ORIGINAL COMPONENTS AND A TWO-YEAR WARRANTY ON THE FRAME. THIS WARRANTY APPLIES ONLY TO THE ORIGINAL OWNER AND IS NOT TRANSFERABLE.



**DISCOVER
THE STREETS OF**
STRIDA

WWW.STRIDA.CO.UK